
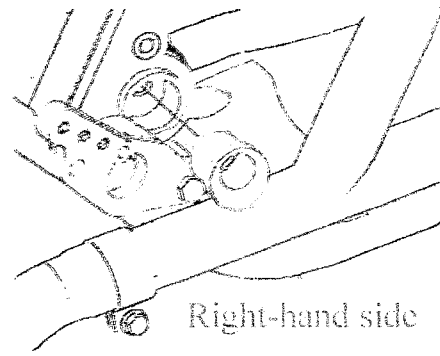


SWING-ARM STABILIZER
FXR, FLT, FLHR Type Frames (rubber mount)

Instructions

Installs behind the (swingarm) mounting bracket, inside the rubber mount, line up the hole on the rubber mount with the roll pin on the rear fork bracket. Apply vaseline to inside of side mount and STA-BO during installation. Refer to illustrations below.

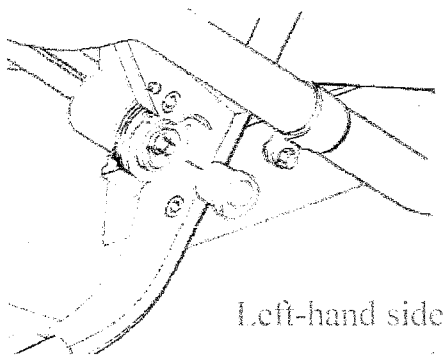

TORQUE SPECS

Rear Fork (Swingarm) Pivot Shaft	40-45 ft-lbs
Rear Fork (Swingarm) Bracket Bolts	34-42 ft-lbs

INNOVATIONS-STA-BO,LLC
Murfreesboro, TN 37130
(615)895-8993
www.sta-bo.com